

Fragile Planet Ltd

Unit 5
Maesbury Road Industrial Estate
Oswestry
SY10 8HA
T: 01691 672869
E: TonyGray@fragile-planet.co.uk
W: www.fragile-planet.co.uk

Company Number: 5274350
VAT Registration 869 5030 00

Chamber Assembly Instructions

Comprises


- 2 x Long Sides in ply (A)
- 2 x Short sides with chamfered edge (B)
- 2 x Top Rails cedar
- 2 x Bottom Rails cedar (with chamfered edge)
- 8 x Nails 50mm long
- 8 x Nails 40mm long

Important – you need to make this in accordance to these instructions since the sides (B) must be slid to make a fit.

1. Attach the Top rails to an A side by driving a nail through the ply. Ensure that the top rails are aligned to be flush with the top of the A side.



Fig a showing top rail alignment

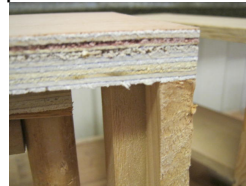

2. Attach the bottom rails similarly ensuring that the rails are flush with the



bottom of the A side.

3. The A side and rails will now look like this



4. Attach the other A side to the rails



- Gently slide the B side up inside the box and check alignment with a frame



to ensure correct bee space (top or bottom)

- Nail the B side from the inside of the box into the top and bottom rails as required.
- To ensure that damp doesn't affect the ply. Paint the cut edges with either a waterproof paint or alternatively run some exterior PVA glue down the edges.
- Paint the external ply with a suitable waterproof paint.

Schematic drawing

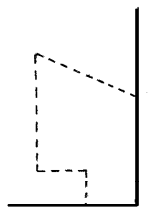


Fig 1

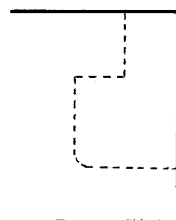


Fig 2

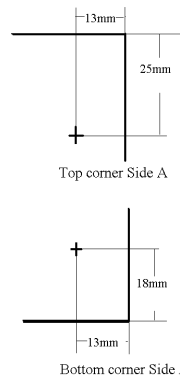


Fig 3

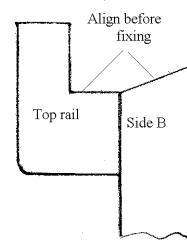


Fig 4

